


Solemnly explain:

In order for you to use the UPS Special Battery Box Series correctly, please read this manual carefully.

UPS Special Battery Box Series: C-4, C-6, C-8, C-10, C-16, C-20, C-24, C-32
Installation instruction as below:

Box component name:

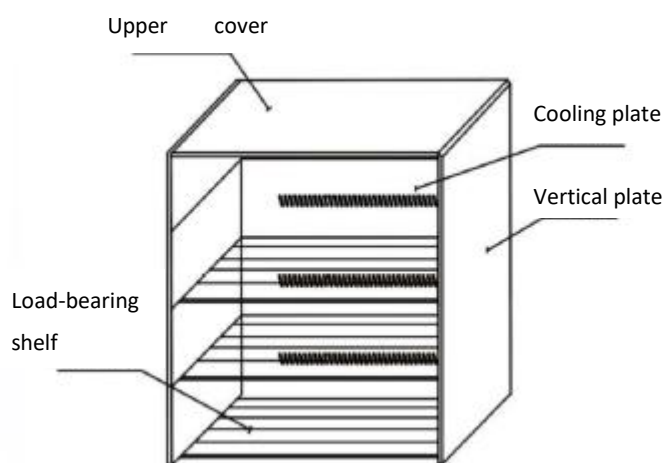

Box components:

1.C-4, C-6, C-8, C-10, this four kinds are a two-layer combination which were packed in a carton:

upper cover plate: 1pcs vertical plate: 2pcs cooling plate: 4pcs load-bearing shelf: 2pcs

2.C-12 is a three-layer combination was packed in a carton:

upper cover plate: 1pcs vertical plate: 2pcs cooling plate: 6pcs load-bearing shelf: 3pcs

3.C-16, C-20, C-24, this three kinds are a four-layer combination which were packed separately in A and B types of double cartons.

upper cover plate: 1pcs vertical plate: 2pcs cooling plate: 8pcs load-bearing shelf: 4pcs


4.C-32 is a four-layer and two-row combination which was packed separately in A

and B types of double cartons.

upper cover plate: 1pcs vertical plate: 2pcs cooling plate: 8pcs load-bearing shelf: 8pcs

Box assembly steps:

1. Firstly, take out 2pcs vertical plates, and use load-bearing shelf insert into the bottom corner iron limit slot of vertical inside plate from top to bottom, and then place another load-bearing shelf on the fourth floor to fix the box. At last, please try to cover the upper cover plate to see if it can be covered. (refer to picture1)

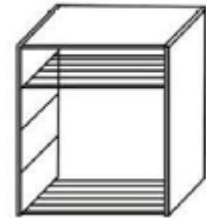

(picture 1)

2. Take away the upper cover plate, and then place a set of battery on the bottom (batteries should be placed neatly, and have same distance between front and back of cooling plate to avoid blocking the cooling plate slot). Connect the battery wire according to the need of use, and install the cooling plate on the bottom, to ensure that the box not shake. (refer to picture2)




(picture 2)

3. Install the second floor, please take away the load-bearing shelf on the fourth floor which installed previously and put it on the second floor. Place the batteries on the second floor, and then install cooling plate on the second floor. (refer to picture3)


4. The installation of the third and fourth floor, please refer to point 1.2.3 above. You make sure it is correct and cover the upper cover plate at last. (refer to picture4)

Matters need attention:

1. Above installation instruction takes C-16 battery box as example.
2. After the batteries' installation, do not move.

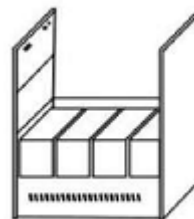

(picture 3)

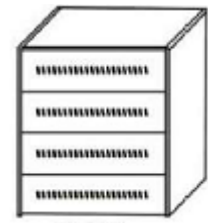

(picture 4)