

# SPS-9600/9602

## High Current Switching Mode Power Supply with Remote Sensing & Control

### User Manual

## 1. INTRODUCTION


This 900W switching mode DC regulated dual output power supply series provides high current with constant current limiting protection. It has a variable output: 1~15Vdc for SPS-9600 & 1~30Vdc for SPS-9602. It is designed with a high efficient Active Power Factor Corrector. The remote sensing terminal is used to compensate for long output line losses. The output voltage level can be externally controlled via the remote control terminal.

## 2. PRECAUTIONS CAUTION! : The AC Input is DOUBLE POLE FUSING


- **Never Short the Remote Sensing Terminal**
- This power supply is for Indoor Use Only.
- **Do not** expose the power supply to sun, high humid and dusty environment.
- **Never** remove the metal cover of the power supply while AC power is connected.
- **Never** touch the unit when your hands are wet.
- **Never** block the ventilation slots and cooling fan air intake window
- **Never** attempt to repair the power supply. Incorrect re-assembly may result in a risk of electric shock or fire.
- **Never** use the power supply for the load requiring higher current than the designed value otherwise it may damage the power supply.
- Place the power supply on a flat surface with sufficient clearance, dry, dust free surroundings for ventilation.

## 3. CONTROLS AND INDICATORS

**Note: Main and Auxiliary output give out same output voltage**

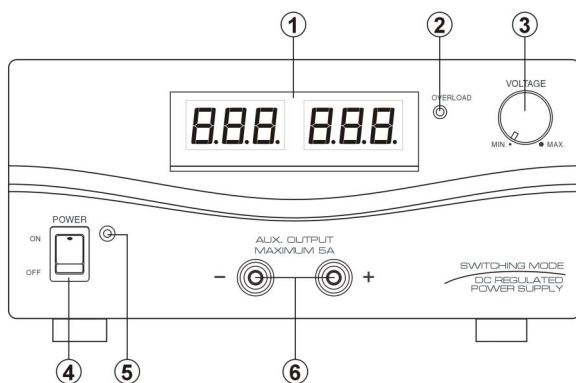

**Front**

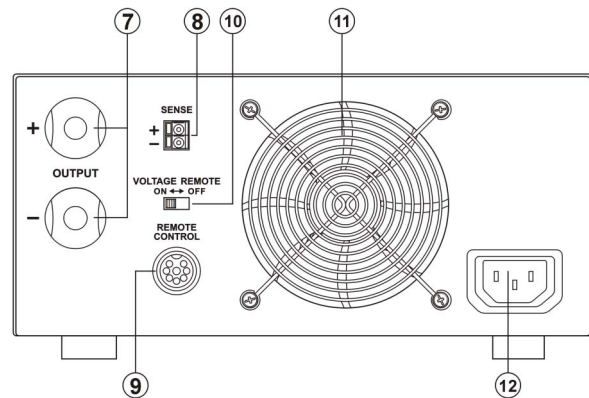

**Rear**

- (1) Voltage & Ammeter LED Display
- (2) Overload LED Indicator – Overload(Constant Current Limiting) & Short-Circuit Protection
- (3) Output Voltage Control Knob(control both main and auxiliary output)
- (4) Power ON/OFF Switch
- (5) Power ON/OFF LED
- (6) Auxiliary Output Terminal (Rated 5A for SPS-9600 / Rated 3A for SPS-9602)
- (7) Main Output Terminal (Rated 60A for SPS-9600 / Rated 30A for SPS-9602)  
 Note : SPS-9600 : The Total Rated Current(Aux. + Main) is 60A  
 SPS-9602 : The Total Rated Current(Aux. + Main) is 30A
- (8) Remote Sensing Terminal (**Warning! : Never short the remote sensing terminal**)
- (9) Remote Control Terminal
- (10) Remote Control ON/OFF Switch
- (11) Cooling Fan Air Intake Grille
- (12) AC Input Plug

## 4. CONNECTION

- 4.1 This series has 2 models. Make sure you have purchased the correct one. They have different output voltage range and current as following:

Model Number	Output Voltage Range	Total Rated Current (Main+Auxiliary)
SPS - 9600	1 ~ 15V	60A
SPS - 9602	1 ~ 30V	30A

- 4.2 Check the rating label of the power supply and make sure it complies with your AC mains voltage. Connect the power supply to the AC Mains using the provided power cord.

Steps 4.3 & 4.4 explain how to use the special features: remote sensing and remote control. You can use the 2 features at the same time or separately.

Please go to step 4.5 if you do not use the 2 features and make sure the remote control ON/OFF switch is in OFF position(rear panel).

- 4.3 **REMOTE SENSING** – Take note of the warning and follow the order of installation.

**Warning!:**Never short the Remote Sensing Terminal

### Connection:


1. First complete the power connections between power supply and equipment.
2. Check and make sure the power connections are secure.
3. Then make connections between Remote Sensing and equipment.

**Warning!:**Never short the Remote Sensing Terminal

### Dis-connection:

1. First disconnect the remote sensing connections.
2. Then disconnect the power connections between the power supply and equipment.

Fig 3 showing connections between Remote Sensing, Power output and Equipment.

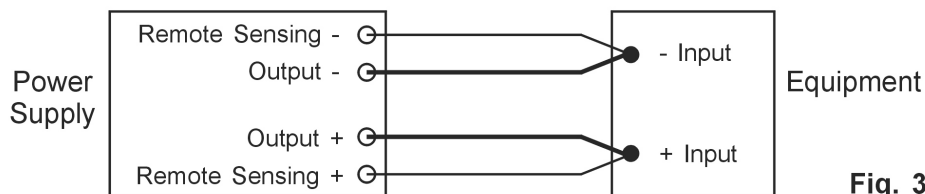


The remote sensing wire should be AT LEAST 22AWG wire size.

## 4.4 REMOTE CONTROL

### 4.4.1 VOLTAGE REMOTE CONTROL

Set up the provided remote connector plug

- (a) Remove the black portion of the remote control connector plug by removing the screw as Fig 4.

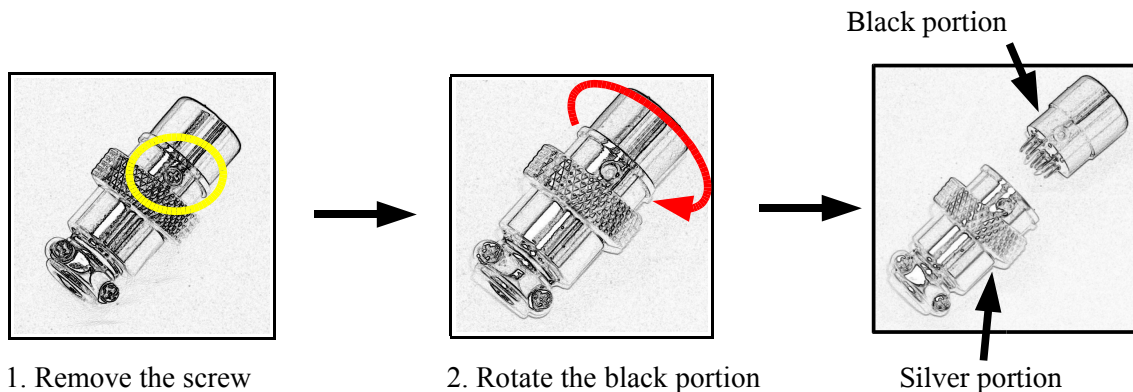

(b) Solder 3 wires(22AWG) to PORT 1, 2 & 3 of black portion as shown in Fig.5.

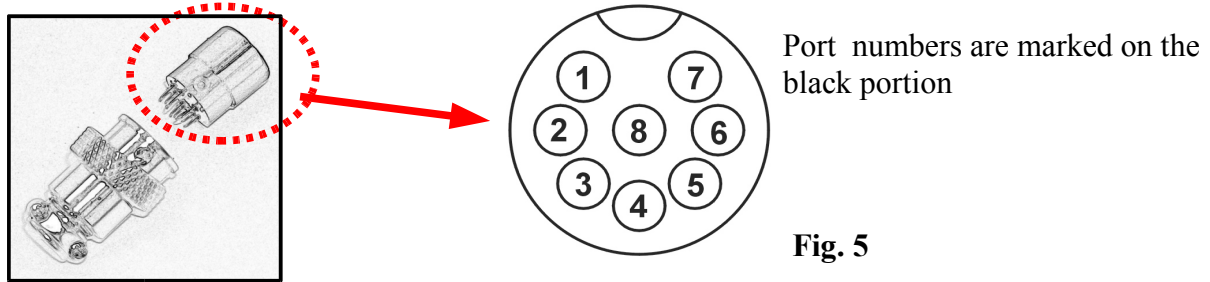


Fig. 5

(c) **Make sure the load is disconnected and the power supply is OFF.**

(d) Plug the remote connector plug into the remote control terminal of the power supply.

(e) Secure the remote connector plug to the terminal socket by locking connector ring(Fig 6).

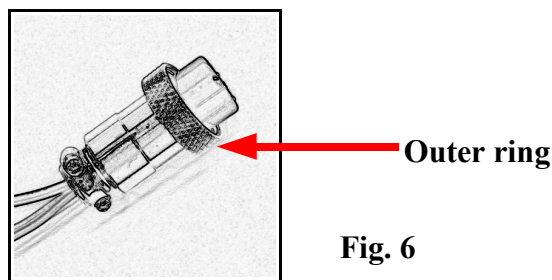


Fig. 6

Then, you can choose either method A or B below to use the remote control feature:

**Method A : Using External Voltage Source**

A variable external voltage source of 0 ~ 5V is fed into the remote control terminal to adjust the output voltage level of both Main and Auxiliary output.

**Warning! : Do not input higher than 5V, otherwise the OverVoltage Protection(OVP) will be triggered.**

- A**
- (i) Make sure the load is disconnected and the power supply is OFF.
  - (ii) Use ONLY wires from port 2 and 3. Then, connect port 2 to positive polarity of the external voltage source and port 3 to negative polarity of the external voltage source.
  - (iii) Turn the Remote Control ON/OFF Switch to ON position.
  - (iv) Switch on the power supply.
  - (v) Vary the external input voltage 0 – 5V to check and verify for the full output voltage range of power supply.
  - (vi) Switch off the power supply.

**Method B: Using Internal Voltage Source**

- B**
- (i) Make sure the load is disconnected and the power supply is OFF.
  - (ii) Prepare a 5kohm variable resistor and use wires from port 1, 2 and 3 as shown in Fig.7.

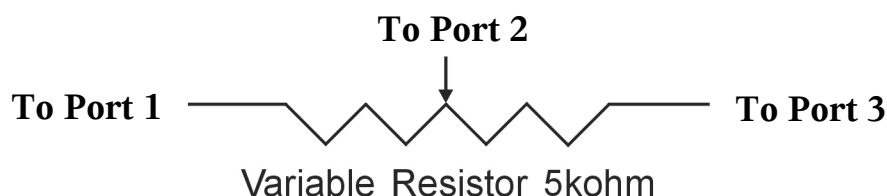


Fig. 7

(iii) Turn the the Remote Control ON/OFF Switch to ON position.

(iv) Switch on the power supply.

(v) Adjust the 5kohm variable resistor from one end to other end to check and verify for the full output voltage range of power supply.

(vi) Switch off the power supply.

#### **4.4.2 ENABLE AND DISABLE THE OUTPUT**

You can use Port 7 and 8 to remote control the OUTPUT ON/OFF.

- a) Open Port 7 and 8 if you want to ENABLE the output ( By default )
- b) Short Port 7 and 8 if you want to DISABLE the output.

- 4.5 If you do not use the remote control feature, make sure the remote control ON/OFF switch is in OFF position(Rear panel).
- 4.6 Switch on the power supply and the power ON/OFF LED should light up in green.  
Then, adjust the output voltage to the desired voltage and switch off the power supply.
- 4.7 Connect the equipment to the power supply. Red (+) is connected to the positive polarity input of the equipment and Black (-) is connected to the negative polarity input of the equipment.
- 4.8 Switch on the power supply first and the LED Indicator should light up in green.
- 4.9 Switch on the equipment and the LED Indicator should still remain in green.
- 4.10 You can now operate the equipment.  
When an operation is finished, switch off the equipment first and then switch off the power supply.
- 4.11 When disconnecting the power supply from the unit, disconnect the remote sensing wire first, then disconnect the output cables.

### **5. SPECIFICATIONS**

	<b>SPS-9600</b>	<b>SPS-9602</b>
<b>Variable Output Voltage</b>	1 ~ 15V	1 ~ 30V
<b>Total Rated Output Current (Main + Auxiliary Output)</b>	60A	30A
<b>Rated Output Current (Main)</b>	60A	30A
<b>Rated Output Current (Auxiliary)</b>	5A	3A
<b>Ripple and Noise</b>	40mVp-p	
<b>Load Regulation</b>	0.1% + 5mV	
<b>Line Regulation</b>	0.05% + 3mV	
<b>Input Voltage</b>	230VAC / 50Hz ( or on request )	
<b>Efficiency</b>	>85%	
<b>Dynamic Power Factor Correction</b>	>0.97 at optimal load	
<b>Voltmeter and Ammeter Display</b>	3 digit LED display	
<b>Meter Accuracy</b>	+/- 1% + 1 count	
<b>Indicator</b>	Green LED for power on/off indication Red LED for overload/short circuit indication	
<b>Special Feature</b>	Remote Control & Remote Sensing	
<b>Cooling Method</b>	Variable Speed thermal static control fan	
<b>Operating Temperature</b>	0 ~ 40°C	
<b>Protections</b>	Overload(Constant Current Limiting), Short Circuit, Overtemperature and OVP	
<b>Approvals</b>	CE-EMC: EN 55022 CE-LVD:EN 60950	
<b>Dimension</b>	220 (W) x (H)110 x 360(D) mm	
<b>Weight</b>	5.8Kg	